 




BLUETOOTH WIRELESS SPEAKER SYSTEM

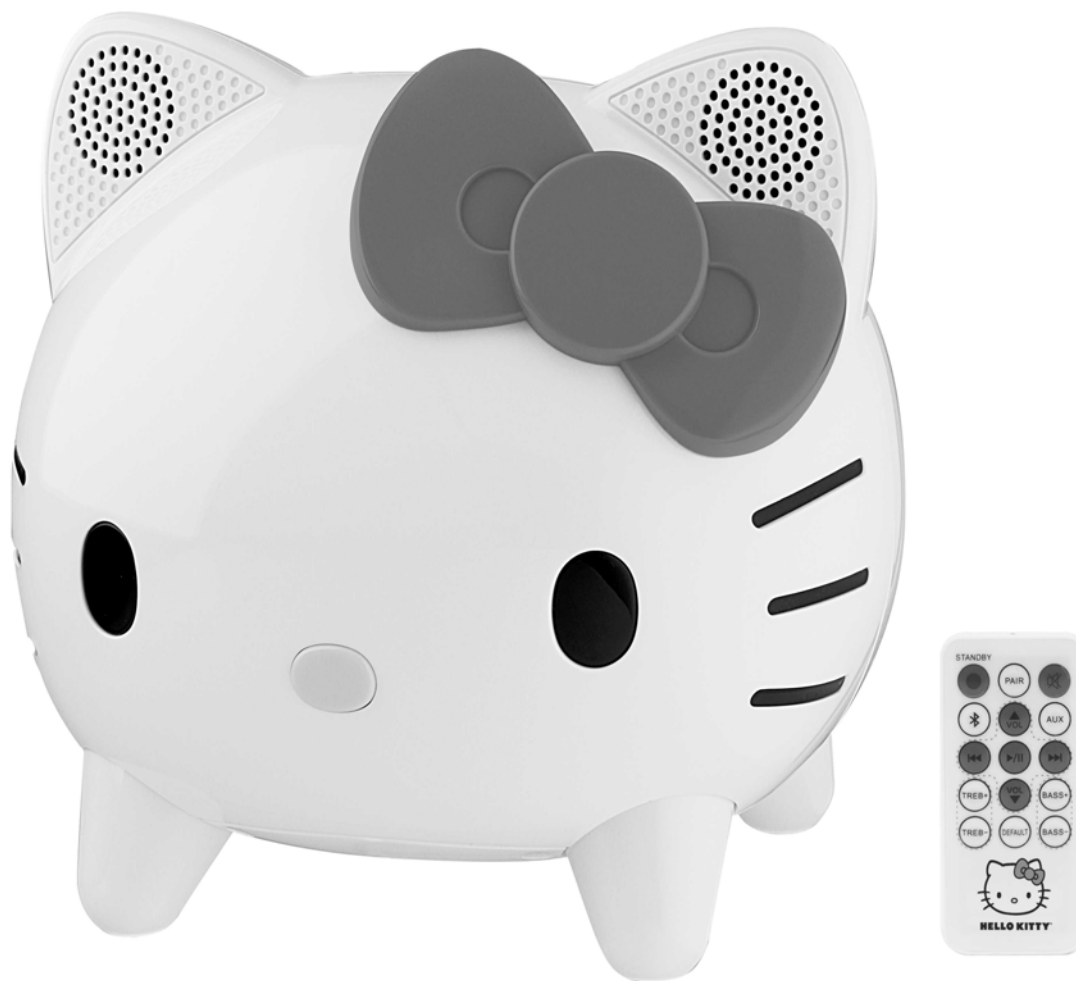

USER MANUAL

KT4559

PLEASE READ THIS OPERATING MANUAL COMPLETELY BEFORE OPERATING
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. The apparatus and AC/DC adapter shall not be exposed to dripping and splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus and AC/DC adapter.
2. The plug of the AC/DC adapter is used as the disconnect device. The power adapter should always remain readily accessible and should not be obstructed.
3. To completely disconnect the apparatus, unplug the adapter from the power outlet.
4. Minimum distance of 4 inches (10cm) around the apparatus and AC/DC adapter should be made available for sufficient ventilation.
5. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table clothes, curtains, etc.
No naked flame sources such as lighted candles should be placed on the apparatus.
6. The apparatus and AC/DC adapter should be used in moderate climates.
7. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
8. The rating plate of the apparatus is located on its back enclosure.

IMPORTANT NOTES

Avoid installing KT4559 in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibrations.
- Dusty, humid or moist places.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE !

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

PACKAGING CONTENTS

- | | |
|-----------------------------|---------------------|
| 1. KT4559 BLUETOOTH SPEAKER | 4. CONNECTION CABLE |
| 2. AC ADAPTER | 5. USER MANUAL |
| 3. REMOTE CONTROL | |

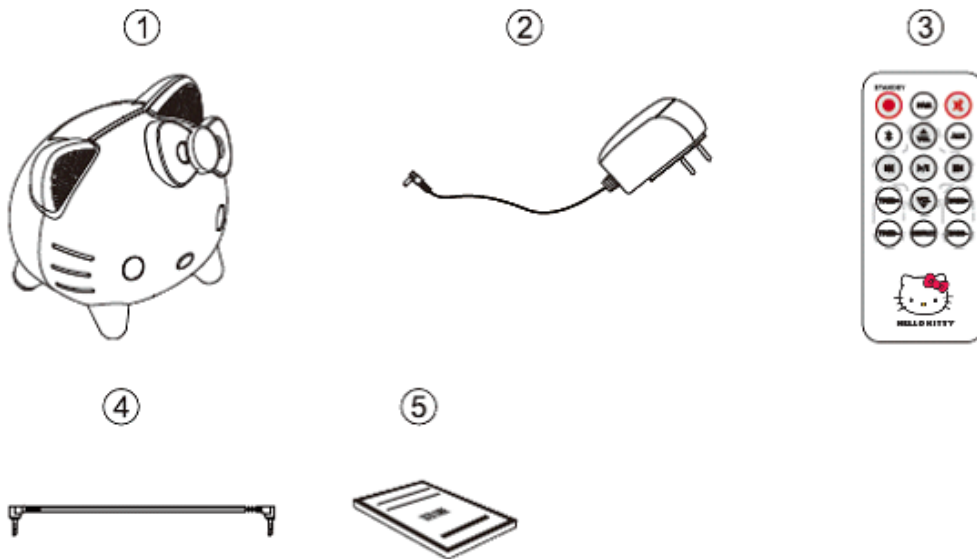 

GETTING STARTED

ACTIVATING THE REMOTE CONTROL

Remove the plastic insulator tag sticking out of the Battery Compartment of the Remote Control by pulling on it. Once the tag is removed, the Remote Control will be ready for use.

 
BATTERY CARE

- If the unit is not to be used for an extended period of time, remove the battery. An old or leaking battery can cause damage to the Remote Control.
- Do not dispose of batteries in fire, batteries may explode or leak.

BATTERY REPLACEMENT

When the battery becomes weak, the operating distance of the Remote Control is greatly reduced and you will need to replace the Lithium battery.

1. Remove the battery compartment from bottom of the Remote Control.
2. Install 1 "CR2025" Lithium battery with the positive side facing up.

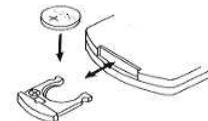

3. Replace the battery compartment.

IMPORTANT: Be sure that the battery is installed correctly. Wrong polarity may damage the Remote Control and void the warranty.

 
USING THE REMOTE CONTROL CORRECTLY

 
- Point the Remote Control at the SENSOR located on the front of the speaker.
- The performance of the infrared SENSOR may be degraded causing unreliable operation if there is a strong ambient light source in the same room.
- The recommended effective distance for remote operation is about 10-15 feet.



Notes: The remote control should be operated effectively pointing to the nose of speaker, within 15 feet distance and within 60 degrees


LOCATION OF CONTROLS

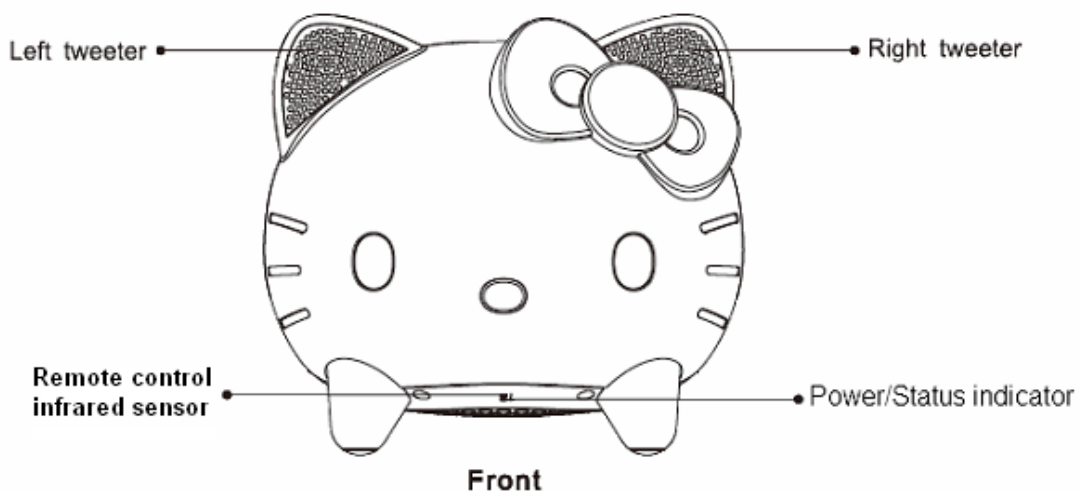

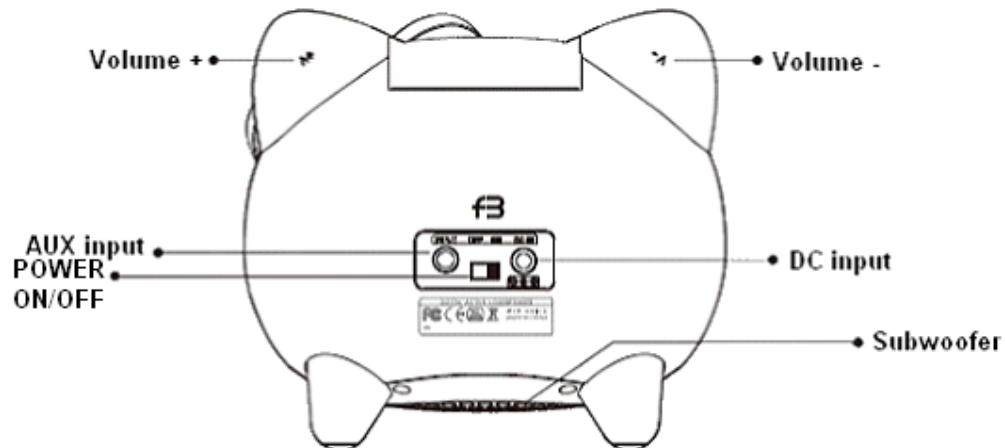


Back

 REMOTE CONTROL

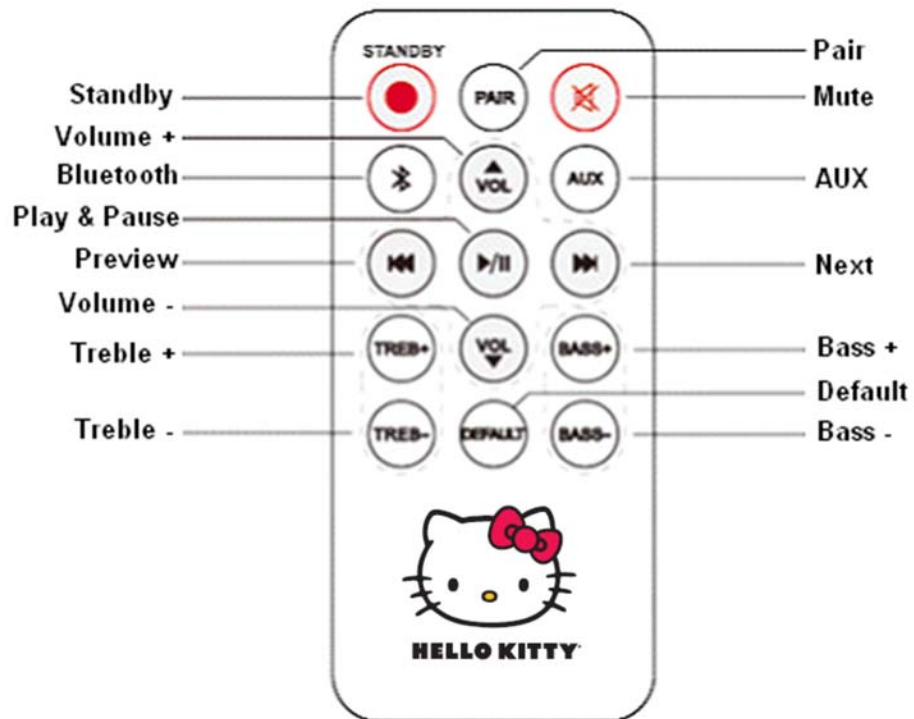


PLAYING FROM A BLUETOOTH DEVICE

 
1. Insert one end of the AC adapter (Included) into the DC IN JACK on the back of the speaker .
2. Connect the AC adapter to an AC 120V~ 60Hz power source. Turn on the speaker by sliding the **Power** switch to "ON". The **Power/Status indicator** should light and remain on.

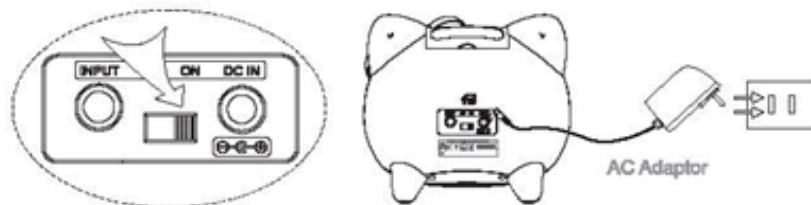

 
3. Pairing the Bluetooth enabled device to the speaker:
 - a) Press **"PAIR"** button on the remote control. The **Power/Status indicator** will flash once.

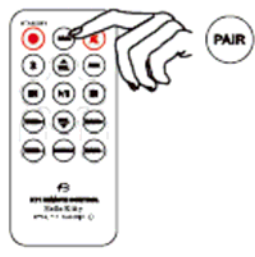

- b) Turn on the Bluetooth function of your device and enable the search or scan function to find the speaker.
 - c) Select "KT4559" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) the speaker with your device.
 - d) If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the KT4559 as your computer's default sound device.
4. After pairing the speaker with the Bluetooth device successfully, you can play music from your Bluetooth device wirelessly to the speaker.
5. After selecting your favorite song, press **PLAY & PAUSE** button on your Bluetooth device or **"Play/Pause"** ►/|| Button on Remote Control to play or pause the Bluetooth device playback.
6. To adjust volume: Touch the left or right ear on speaker at where **"V-"** and **"V+"** are marked to decrease or increase the volume (Note: This is touch-sensitive and you do not need to press on the ears), alternatively you can press **"VOL -"** / **"VOL +"** on the Remote Control.
The **POWER/STATUS INDICATOR** will flash when the volume is being adjusted.

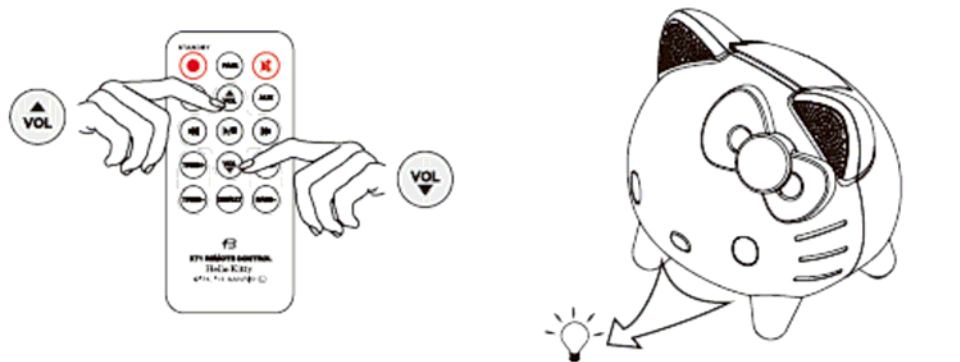 

 7. Press **"◀◀"** or **"▶▶"** on the Remote Control to select Previous or Next track.

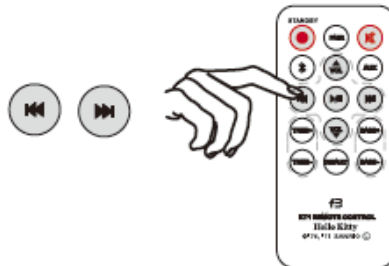

8. Press the **"TREB +"** / **"TREB -"** or **"BASS +"** / **"BASS -"** buttons to adjust the treble or bass effect as desired. The **POWER/STATUS INDICATOR** will stop flashing when TREBLE or

 
BASS is adjusted to the maximum or minimum.




9. If you want to lower the volume immediately, press the **"DEFAULT"** button once. The volume will be set to the defaulted level and the volume will become very low. Press **"VOL +"** to increase the volume when required. You can even stop the sound output by pressing the **"MUTE"** button. The **POWER/STATUS INDICATOR** will flash once every 2 seconds when the mute function is activated. To cancel the mute function press the **"MUTE"** button again.



10. When you have finished listening, press the **"STANDBY"** button once. The speaker will enter the STANDBY mode and the POWER LED will illuminate for 3 seconds in 6 second intervals.

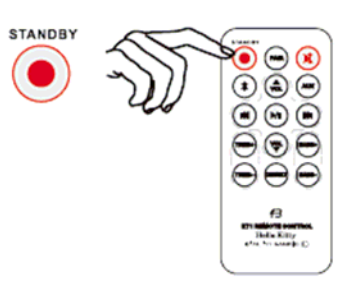

 11. To turn the speaker off, slide the **POWER** Switch on the back of the speaker to the OFF position. The **POWER/STATUS INDICATOR** will go off.

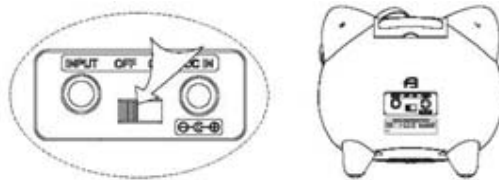

HELPFUL HINT FOR BLUETOOTH OPERATION

 
This Hello Kitty speaker has Bluetooth range of approximately 30 feet (10 meters). Should you step out of range for more than 30 seconds after already having been Bluetooth connected to the speaker, you will need to press the connect button on your Bluetooth enabled device to restore the connection.

AUX IN OPERATION


The speaker provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players or an older, non-dockable iPod (except 3rd generation

iPod shuffle) and listen through the speaker.

1. Switch on the speaker by sliding the **POWER** switch to "ON". The Power LED should light and remain on.

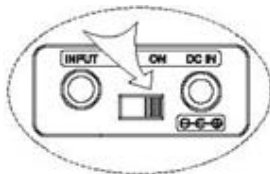

 2. Press the "**AUX**" button on the Remote Control once.
3. Plug one end of the included audio cable into the AUX IN Jack on back of speaker and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.

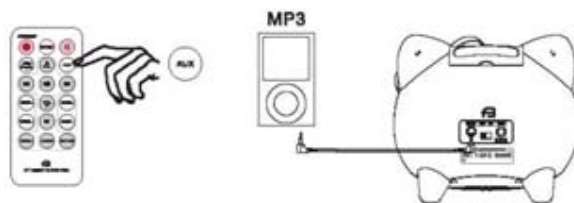

4. Turn on the external audio device.
5. Adjust the volume of the speaker by touching its left or right ear or pressing the "▲"/"▼" buttons on the Remote Control. Operate all other functions from the auxiliary device itself.

Note:

- (1) If you connected the LINE OUT Jack of your external device then you only need to adjust the volume of the speaker using the Remote Control or touching its left or right ear. If you connected the Headphone Jack of your external device then you may need to adjust both the volume control of your external device and the volume level of the speaker to find the most desirable volume setting.
- (2) Switch off the speaker by sliding the **POWER** switch to "OFF" when you have finished listening. The **Power/Status indicator** on the speaker will go off. Don't forget to switch off the power of your external device as well.

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. In case of malfunction, unplug the unit from the electrical power outlet immediately.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect the AC adapter of your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

90 DAY LIMITED WARRANTY AND SERVICE

VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$50.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below to enter your information.

<http://www.spectraintl.com/wform.htm>

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

Printed in China

0912



HELLO KITTY[®]
by **Sanrio**[®]

©1976, 2012 SANRIO CO., LTD.
Used Under License.
www.sanrio.com



SIL-34037